

5

LUCAS

Quality

EQUIPMENT



CAR EQUIPMENT DETAILS
AND SPARE PARTS FOR

ROVER LANDROVER

1950



JOSEPH LUCAS LTD · BIRMINGHAM 19 · ENGLAND

LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
	DYNAMO, C39PV L-0 22250 Cover, band 227627 Brush set 227305 Bracket, commutator end 227594 Bush, commutator end 220258 Oiler 238367 Springs, set, brush 227305 Bearing, drive end 189307 Bracket, drive end 227627 Nut, shaft 180740 Armature 227680 Coils, field 227291 Sundry parts, set 227726	
	STARTER, M418G G76 25514 Cover, band 255557 Cap, shaft 255854 Brushes, pair 255659 Bracket, commutator end 255827 Bush, commutator end 250626 Springs, set, brush 270004 Transmission plate 291362 Sleeve and rubber 290081 Pinion and sleeve 255672 Spring, pinion retaining 255727 Bracket, drive end 255673 Bush, drive end 270883 Bracket, intermediate 255945 Bush, intermediate 255853 Armature 255863 Coils, field 256578 Sundry parts, set 256762 Switch, starter, ST18 76401	
	COIL, Ignition, B12 45012 Nut, H.T. terminal 401820 DISTRIBUTOR, DVXH4A 40154 Plate 414909 Cover 415707 Brush and spring 404435 Rotor arm 408355 Contact set 407050 Condenser 407044 Unit, vacuum 400904/S Cam 409922 Springs, auto advance 416068/S Weights, auto advance 415729 Shaft and action plate 416521 Bearing, top 189272 Bearing bush, bottom 410590 Sundry parts set 400843	



LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
 <p>364595 315069 301187 31199 38043 310392 38046 34035 31109</p>	<p>INSTRUMENT PANEL PARTS</p> <p>Ammeter, CZ26 L8 364595</p> <p>Switch box, PLC6 L133 34035</p> <p>Switch, choke warning light, 54C ... 31109</p> <p>Switch, panel light, P515/1 L4 ... 31199</p> <p>Knob, panel light switch 315069</p> <p>Switch, trafficator, TS82 310392</p> <p>Socket, inspection lamp 301187</p> <p>Warning light, WL3/1 38046</p> <p>Warning light, choke, WL3/1 38043</p>	
 <p>552905 552912 504665 552402 50579 858540 552816 553561 552906 504801 551966 180370 50124 552282 552103 52047 571465 523986 552261 551959 524552 53072 524778 524797</p>	<p>HEADLAMP, L-WD-H0 50124</p> <p>Rim and glass 552261</p> <p>Wires, glass fixing 504665</p> <p>Glass 552282</p> <p>Bead, rubber 551959</p> <p>Reflector 551966</p> <p>Bulb holder, double contact 504801</p> <p>Nut, fixing 180370</p> <p>The following headlamps fitted from Vehicle No. 06112001.</p> <p>HEADLAMP, F700, Right Hand Home ... 50579</p> <p>Rim 552912</p> <p>Screw, rim fixing 552816</p> <p>Excluder, rubber 552906</p> <p>Unit, light 552402</p> <p>Rim, light unit 552905</p> <p>Adaptor, single contact 858540</p> <p>Gasket, body 553561</p> <p>HEADLAMP, F700</p> <p>Left hand Home and dip right ... 50799</p> <p>Adaptor, double contact 858543</p> <p>Otherwise as 50579.</p> <p>HEADLAMP, F700, Export U.S.A. ... 50807</p> <p>Adaptor, Ward and Goldstone 553724</p> <p>Less light unit, otherwise as 50579.</p> <p>LAMP, SIDE, 451 52047</p> <p>Rim and glass 571645</p> <p>Bead 523986</p> <p>Interior, bulb holder 552103</p> <p>LAMP, STOP TAIL, ST51/1 53072</p> <p>Body 524775</p> <p>Glass, stop and tail 522164</p> <p>Glass, number plate 524797</p> <p>Screw, body fixing 524552</p> <p>Fixing parts, set 524778</p>	
 <p>069344 701686 334956 334906 334977 188218 37065</p>	<p>HORN, Electric, HF1235 069344</p> <p>Bracket 701686</p> <p>CONTROL BOX, RF96/2 L13 37098</p> <p>Cover 334904</p> <p>Clip 334906</p> <p>Resistance 334977</p> <p>CONTROL BOX, RF95/2 L2 37065</p> <p>Cover 334956</p> <p>Clip 334906</p> <p>Resistance 334977</p> <p>Fuse 188218</p>	



LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
	<p>SCREENWIPER, CW1</p> <p>Motor 732480</p> <p>Cover 730467</p> <p>Brush set 730388</p> <p>Armature 733108</p> <p>Arm 735096</p> <p>Blade 727803</p> <p>Stop, rubber 730185</p> <p>MIRROR, 540 062561</p> <p>Glass 620951</p> <p>TRAFFICATOR, SE62 053830</p> <p>Arm 539980</p>	
	<p>CONTROLS AND SUNDRY FITTINGS</p> <p>CONTROL, STEERING COLUMN, G/12/48</p> <p>Top cover assembly 324530</p> <p>Horn push assembly 323740</p> <p>Lever, dip switch 323249</p> <p>FUSE BOX, SF5/2 385211</p> <p>Fuse 188218</p> <p>JUNCTION BOX, 6J 770017</p> <p>SWITCH, STOP TAIL LAMP, 54C 315725</p> <p>Spring 315726</p>	
	<p>BULBS</p> <p>Headlamp, L-WD-HO 171</p> <p>Headlamp, right hand Home, F700 162</p> <p>Headlamp, left hand dip, F700 300</p> <p>Headlamp, right hand dip, F700 301</p> <p>Side light 207</p> <p>Stop tail 207</p> <p>Panel illumination 207</p> <p>Warning light 970</p> <p>Trafficator 256</p> <p>CABLES</p> <p>Main harness for RF95/2 control box 978061</p> <p>Main harness for RF96 2 control box 975260</p> <p>Headlamp and horn harness 859051</p> <p>Positive, battery to earth 859054</p> <p>Negative, battery to switch 810848</p>	

